

Technical guide
EC170 motor – G9


I

09/03/2023	Postal address is updated
08/02/2023	1 st release

Electrical installation


230V version :

Parameter	Min.	Nominal/Type	Max.	Unit	Remarks
Motor Class I					
Power supply					
Voltage	180	220..240	264	Vac	
Frequency	47	50	63	Hz	
Power usage	1	1..170	170	W	Consult technical datasheet

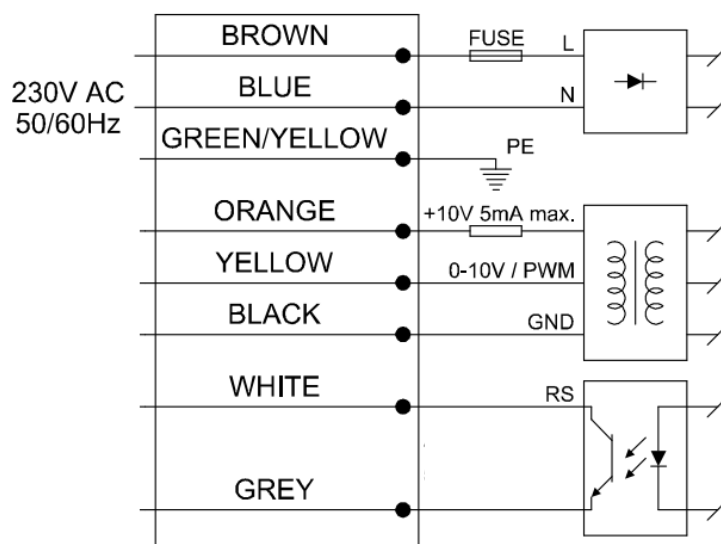

120V version :

Parameter	Min.	Nominal/Type	Max.	Unit	Remarks
Motor Class I					
Power supply					
Voltage	90	115..120	140	Vac	
Frequency	47	60	63	Hz	
Power usage	1	1..170	170	W	Consult technical datasheet

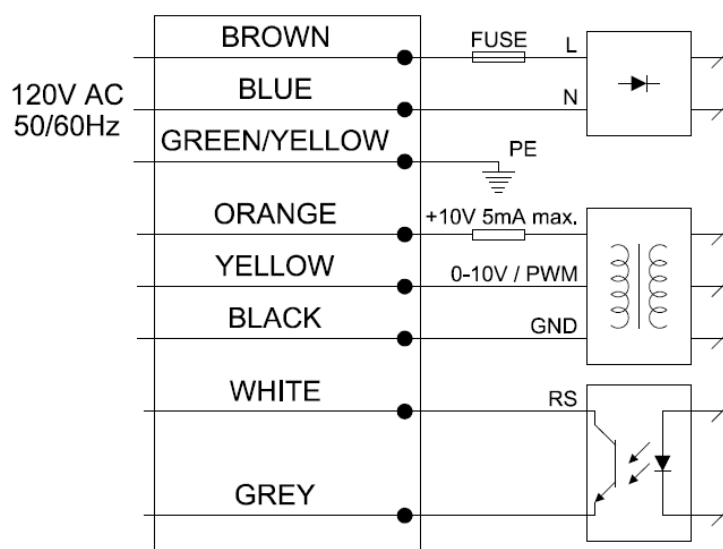

The EC170 motor is a class I product which means connection to protective earth is mandatory to comply with safety regulation.

In general, installation should take care to not have power cables and interface cables laying next to each other, perpendicular crossing should be preferred.

While the motor is powered ON, do not connect Vctrl (yellow wire : 0-10V / PWM) to an external controller before GND (black wire) is connected.



The G9 motor-fan contains electronic device which can be sensitive to electrostatic discharge. Take appropriate care especially when handling the low voltage cable.

Analog input and outputs


Inputs :



Parameter	Min.	Nominal/Type	Max.	Unit	Remarks
Input 0-10V/PWM					
Input resistance		10k or 100K		Ohms	Refer to product data sheet
0-10V option					
Voltage range	0		10	Vdc	
Full stop voltage	0.7	1		Vdc	
Minimum speed voltage		1.5	2	Vdc	
Maximum speed voltage	9.9	10	10.1	Vdc	
PWM option					
Voltage range	0		10	Vdc	PWM must be at 0V and 10V (low and high states)
Frequency range	1000		10000	Hz	
PWM range	0		100	%	

Parameter	Min.	Nominal/Type	Max.	Unit	Remarks
Power consumption					
Motor not running (Vctrl=0V)		0.71	0.9	W	At 230V

Outputs :

Parameter	Min.	Nominal/Type	Max.	Unit	Remarks
+10V isolated					
Output current		5		mA	Short circuit-protected.
Opto Type		NPN type OC			OC=Open Collector
External voltage range	1		55	Vdc	
External current range			5	mA	
Frequency range	1		84	Hz	60Hz = 3600 RPM
Vcesat		0.25	0.4	Vdc	

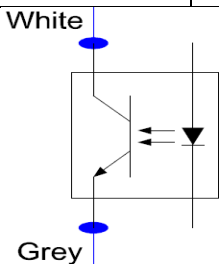Parameter	Min.	Nominal/Type	Max.	Unit	Remarks
Opto type					
Wiring convention					Other cable color on specific request
Configured to Tachymeter					
Duty Cycle		50%			60Hz = 3600 RPM
Configured to Alarm		Normally 'Open' Or 'Closed'			

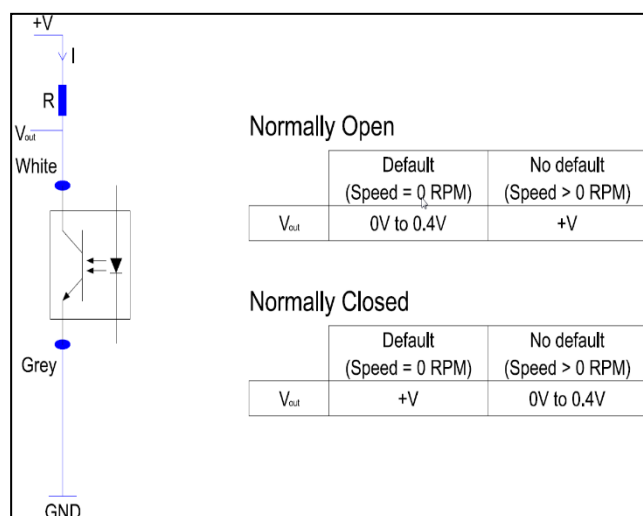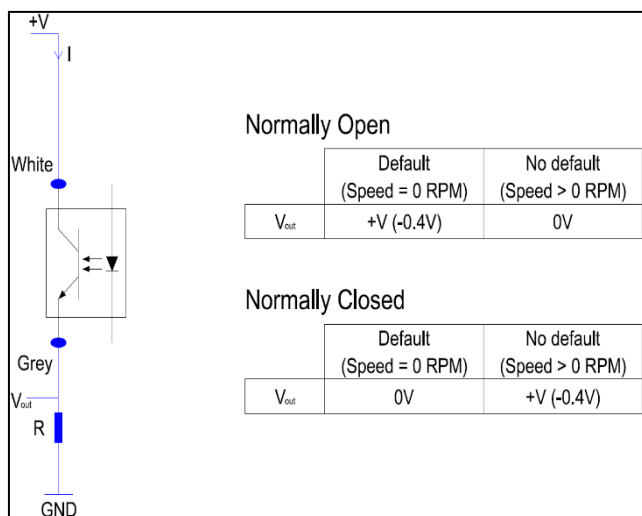

Paralleling speed control

If several G9 motors are controlled with the same speed setting, it is possible to interconnect several 0-10V inputs. Yellow wire and black wire can be connected together but it is not possible to directly interconnect +10V supply (orange wire). If it is necessary for redundancy to use several +10V supply, you must interconnect them through diodes (diode OR circuit).

Additional protection

If the motor is connected to an electric installation where an earth leakage circuit breaker is used as additional protection, this circuit breaker must be of the type A or B according to EN50178. Leakage current measured according to EN60335 is less than 3.5mA.

Product safety behavior

Locked rotor:

The electronic driver detecting a blocked rotor will power off the motor. Every 5s, it will try to restart, up to 25 times.

If none of the attempts succeed, the motor will go into a safety mode. It will be necessary to power OFF the motor for about 1 minute to reinitialize and to check if the rotor is rotating freely.

Motor overload:

In case of overload condition detected by the electronic driver (too high current or too high speed), it will stop powering the motor.

It will be necessary to power OFF the motor for about 1 minute to reinitialize and to check if the rotor is rotating freely.

Thermal protection:

The electronic driver temperature is constantly monitored to protect the motor from over temperature condition.

In case of temperature approaching dangerous threshold, the power of the motor is reduced. If the temperature reach critical value, the motor is stopped. It will automatically restart when the temperature is back to normal values.

Low voltage control interface:

Always connect the 'GND' signal (black wire) before the '0-10V / PWM' signal (yellow wire) or disconnect this Control signal before disconnecting the 'GND'.

The product is dedicated to be connected to earth. Besides security reason, connecting device to the low voltage interface without the PE may cause damages to the electronic.